



Assembly Instructions MODEL NO.:SL12G Half End Panel


For use to replace full end panel on return or credenza shells

LO2/05-14

A	B	C	D	E	F	G	H	I
CONC10	CONC11	GLIDE	PLASTIC CAP	PLUG	PLUG	TUN013LB	TUN018SC	TUN0191B
Cam Lock Pin 1Pcs+1Pcs	Cam Lock 1Pcs+1Pcs	Glide 2Pcs	2Pcs+1Pcs	CAP FOR METAL INSERT 3Pcs+1Pcs	CAP FOR DOWEL HOLES 2Pcs+1Pcs	L-Bracket 2Pcs	Screw #4* $\frac{1}{2}$ " 18Pcs+2Pcs	Flat Bracket 1Pc


STEP1

STEP1

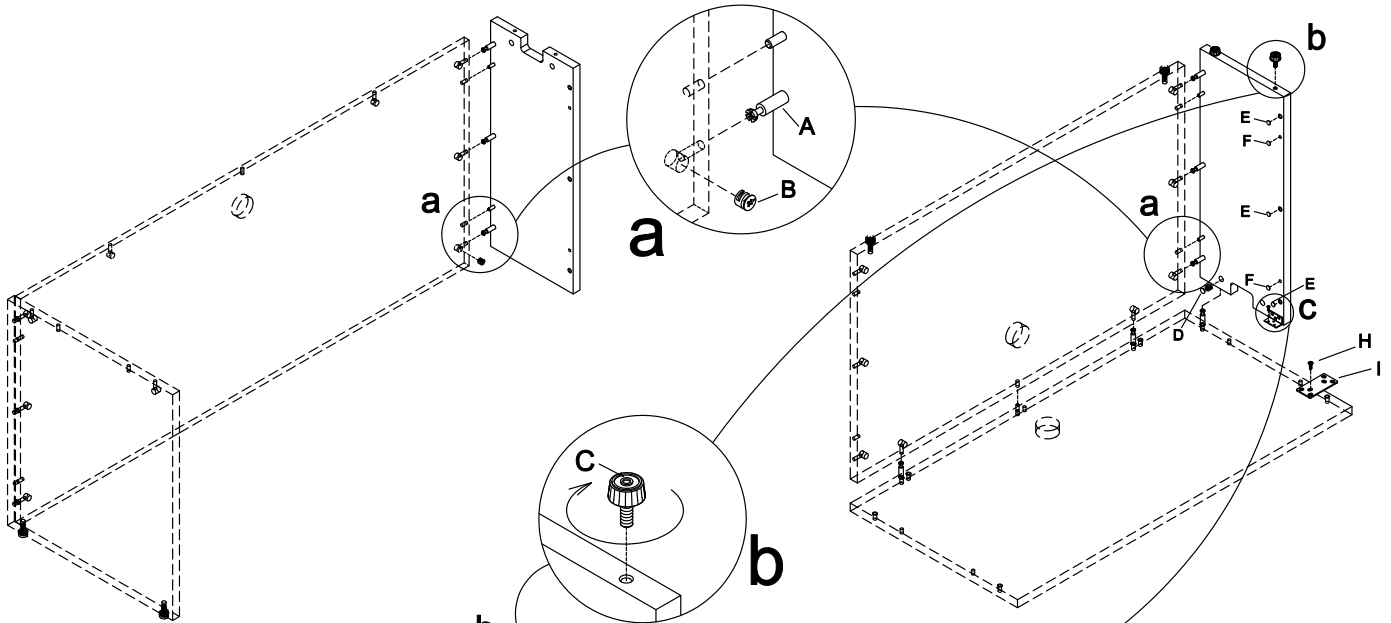

STEP2

STEP2

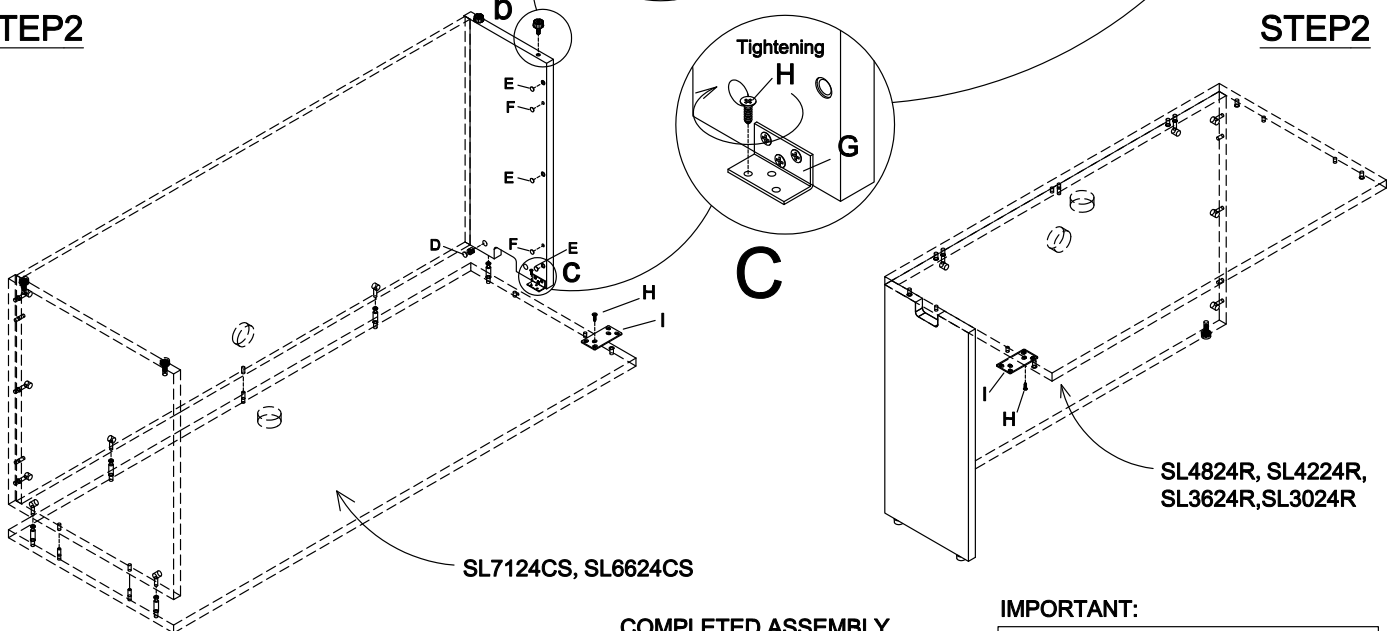

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.

IMPORTANT:

FUNCTION OF CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS POINTING UPWARDS
BEFORE INSERTING INTO THE PANEL'S HOLE.