







# Assembly Instructions


## MODEL NO.:VF16848RH

### R/T CONFERENCE TABLE


### V02/10-12

GLIDE	TUN019SC	TUN013LB	TUN019SC
<b>A</b>  Glide M8*25 18 Pcs	<b>B</b>  Flat Plate 12 Pcs	<b>C</b>  Screw M6*15 88 Pcs+2 Pcs	<b>D</b>  Flat Plate 2 Pcs

#### STEP 1

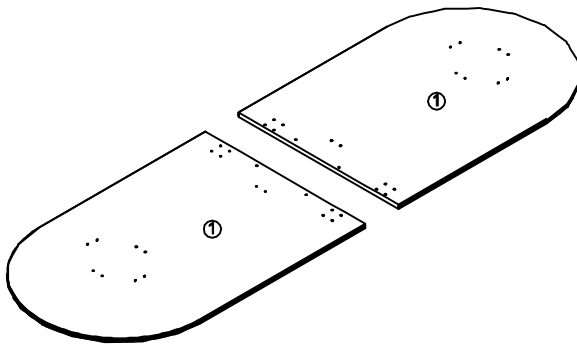


**IMPORTANT:**  
**FUNCTION OF CAM**




1/4 RIGHT TURN FOR LOCKING  
MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE

#### STEP 2

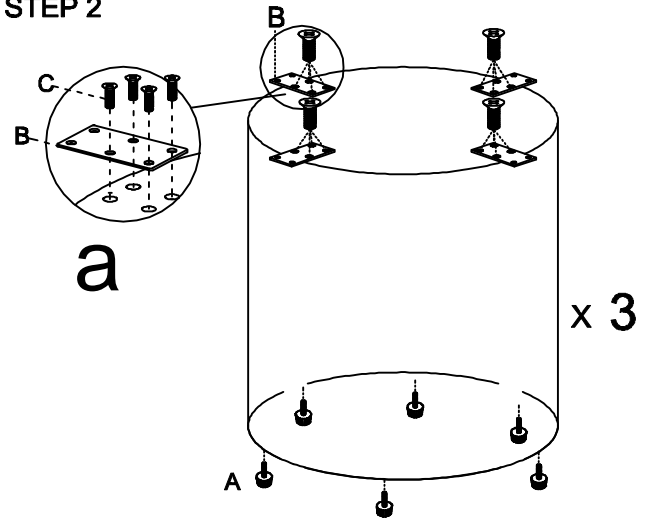

#### STEP 3

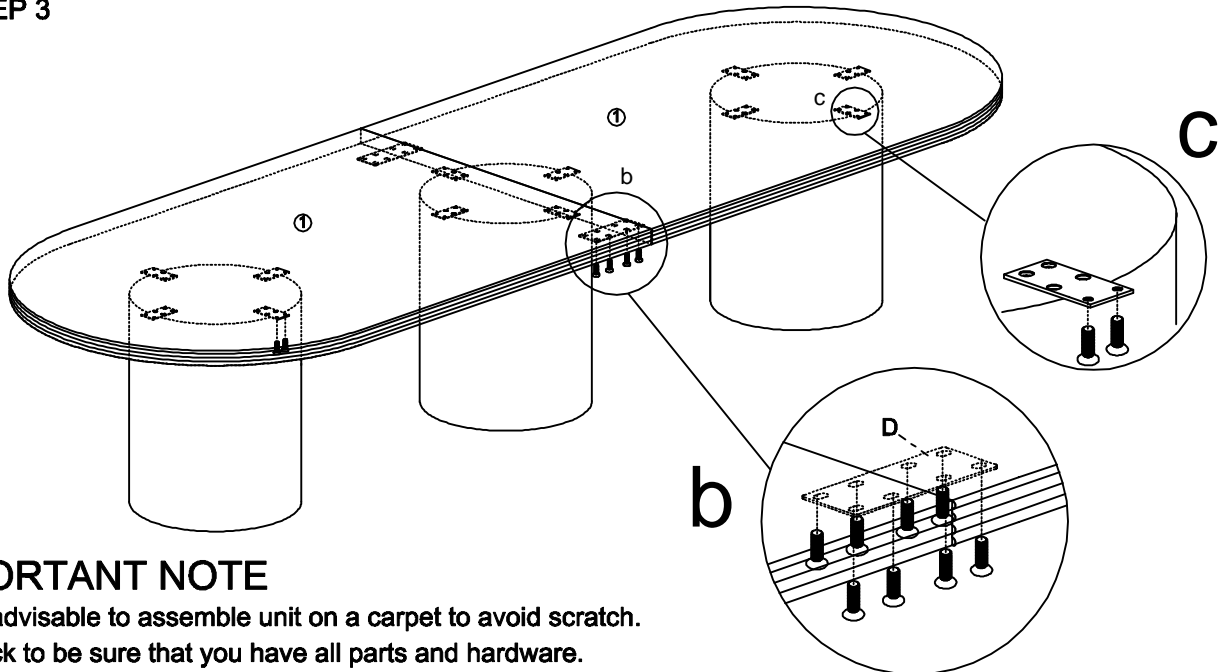

### IMPORTANT NOTE

- .It is advisable to assemble unit on a carpet to avoid scratch.
- .Check to be sure that you have all parts and hardware.
- .Don't tighten all screws/bolts until all completely assembled
- .It is recommended to require 2 persons to complete the assembling.

### CARE&CLEANING

Wood Veneer Finishes: Following the direction of the grain,wipe with a soft damp cloth, then a soft dry cloth. For heavier soils, try a mild soap solution ( do not use spraypolishes, solvents or products containing ammonia ), then repeat the above steps.