








# Assembly Instructions

## MODEL NO.:VF6012RT

### TRANSACTION RETURN TOP

**V02/10-12**

TUN015BG	L-Bracket	TUN013LB	TUN013LB
<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 
Flat Bracket 2 Pcs	L-Bracket 4 Pcs	Screw Ø4*20 12 Pcs+2 Pcs	Screw Ø3.5*16 24 Pcs

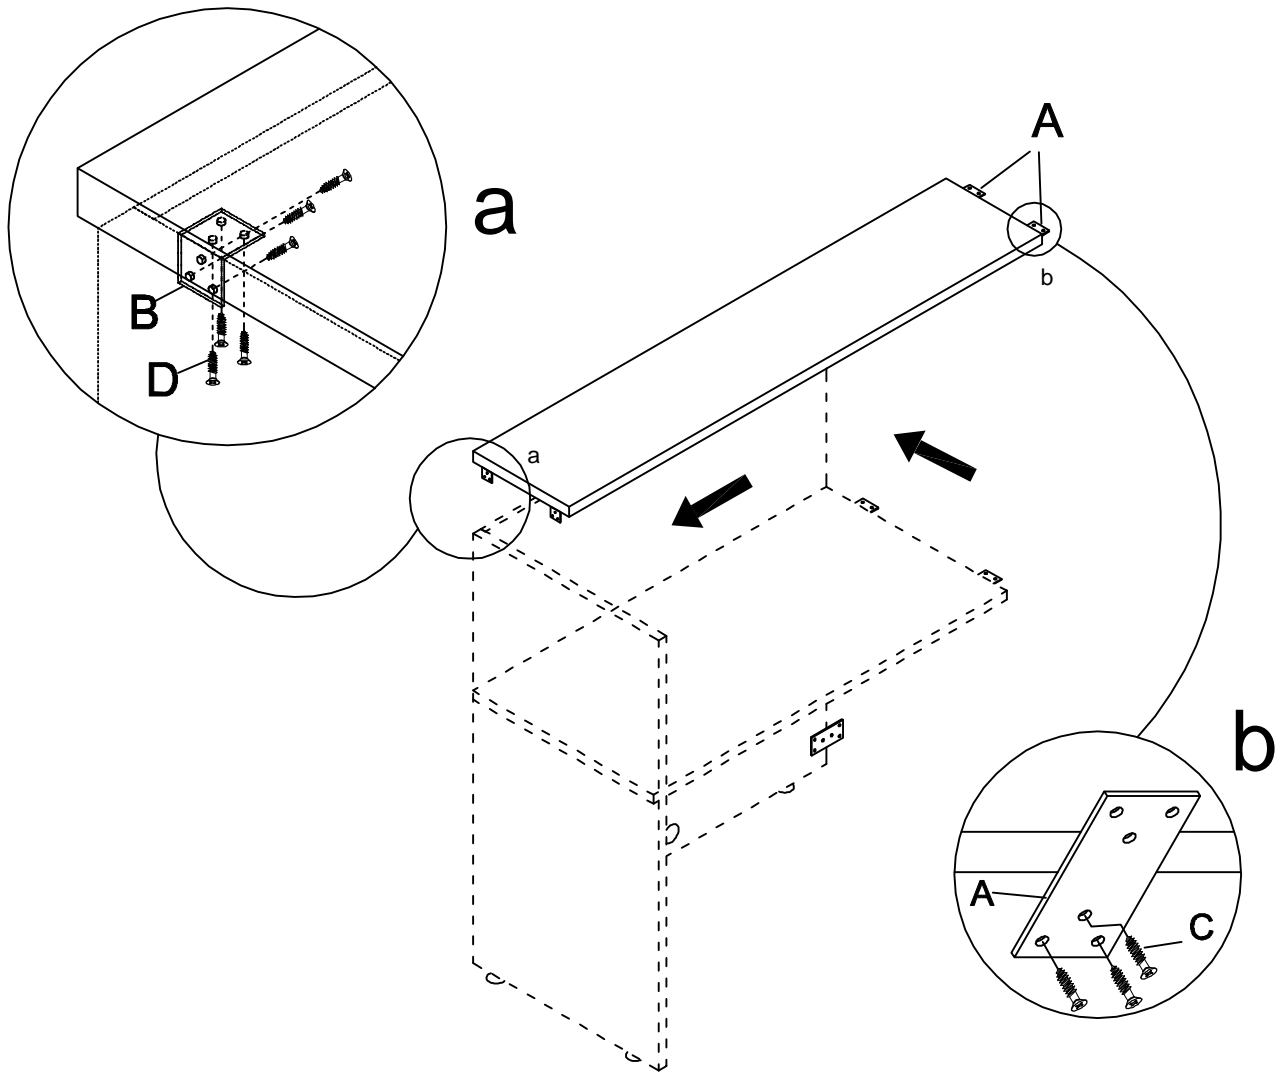

### IMPORTANT NOTE

- .It is advisable to assemble unit on a carpet to avoid scratch.
- .Check to be sure that you have all parts and hardware.
- .Don't tighten all screws/bolts until all completely assembled
- .It is recommended to require 2 persons to complete the assembling.

### CARE&CLEANING

Wood Veneer Finishes: Following the direction of the grain,wipe with a soft damp cloth, then a soft dry cloth. For heavier soils, try a mild soap solution ( do not use spraypolishes, solvents or products containing ammonia ), then repeat the above steps.